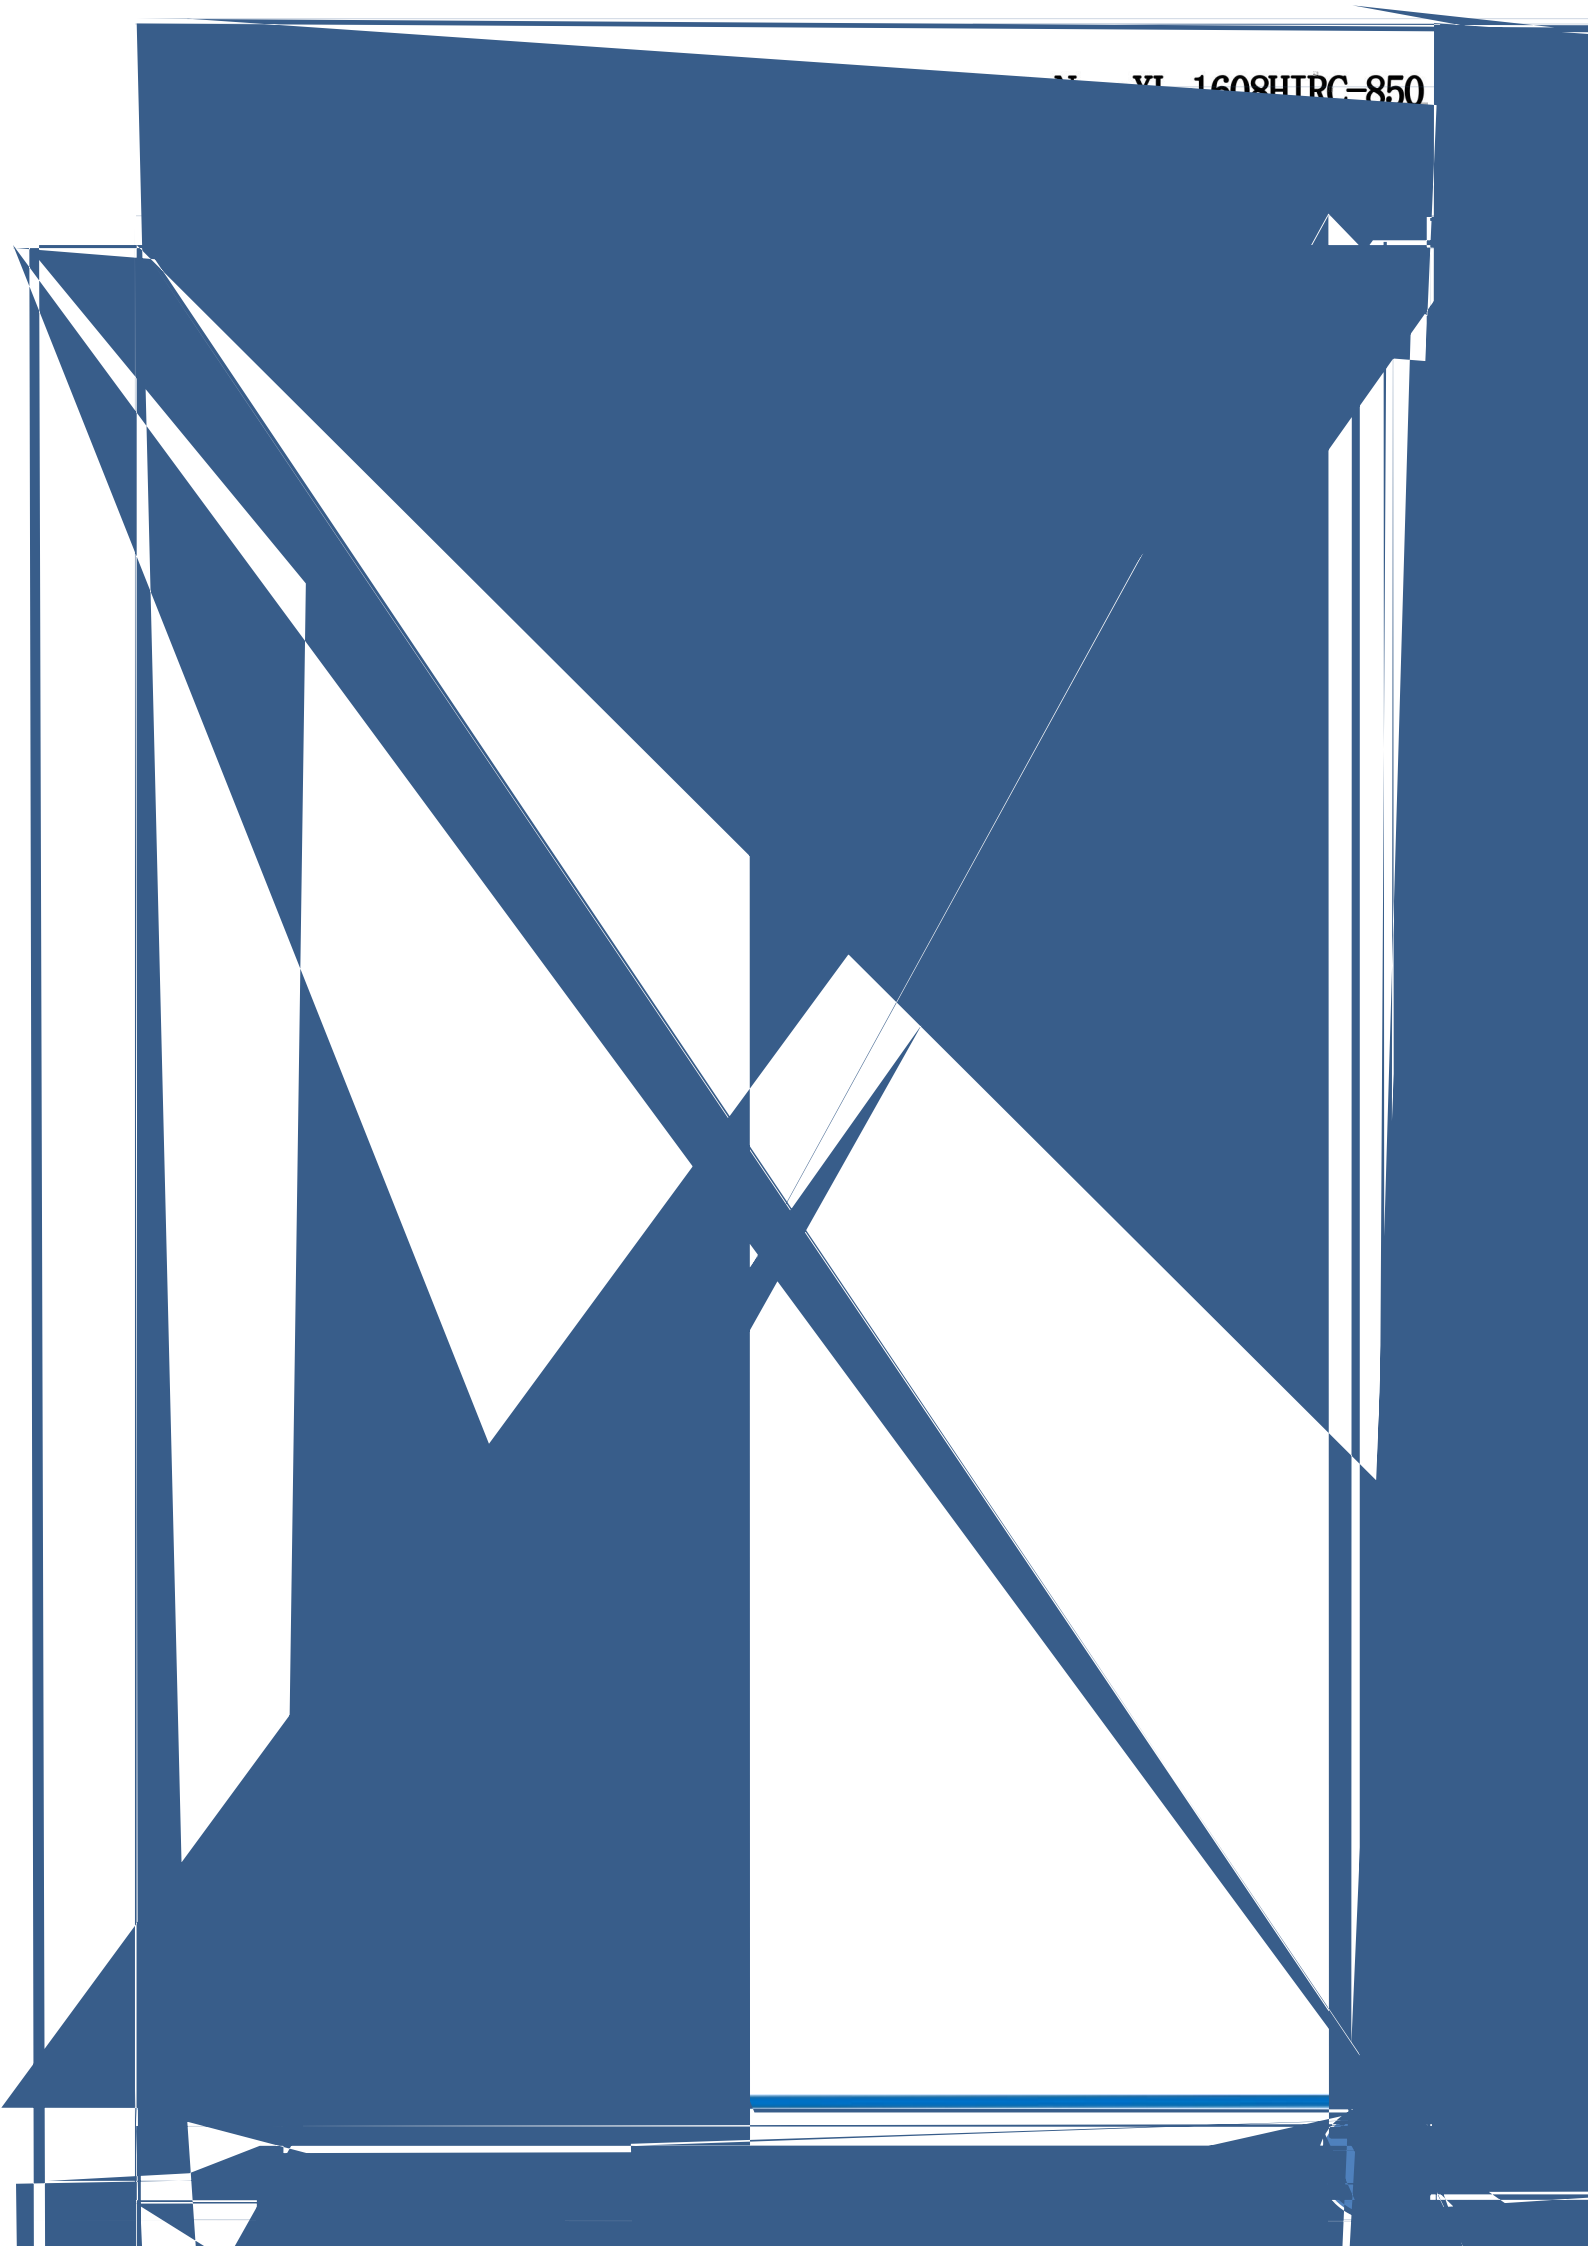

焊接指导（2）

Guideline for Soldering (2)

[redacted]清洗：

[redacted]ani [redacted] ɨ [redacted] ᵇ ɩ [redacted] ŭ m", ʁs

[redacted]

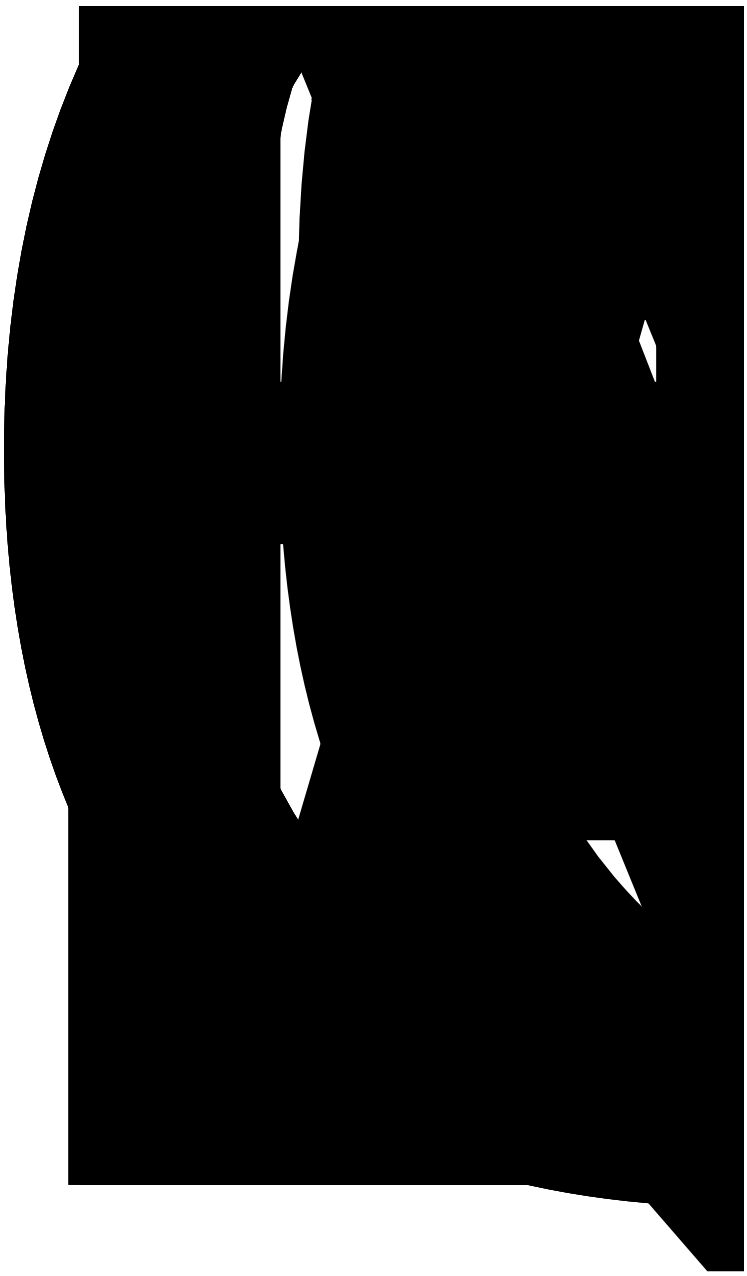

使用注意事项（3）

Precautions (3)

4

Others

When handling the product, touching the encapsulant with bare hands will not only contaminate its surface, but also affect onaits optical characteristics. Excessive force to the encapsulant might result in catastrophic failure of the LEDs due to die breakage or wire deformation. For this reason, please do not put excessive stress on LEDs, especially when the [illegible] Reflow Soldering.



LED